



# Removing the Dell Inspiron 1150 Keyboard

This guide will show you how to remove the keyboard on your Dell 1150 laptop

Written By: Richdave



## INTRODUCTION

This guide will show you how to remove the keyboard on your Dell 1150 laptop


---



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery

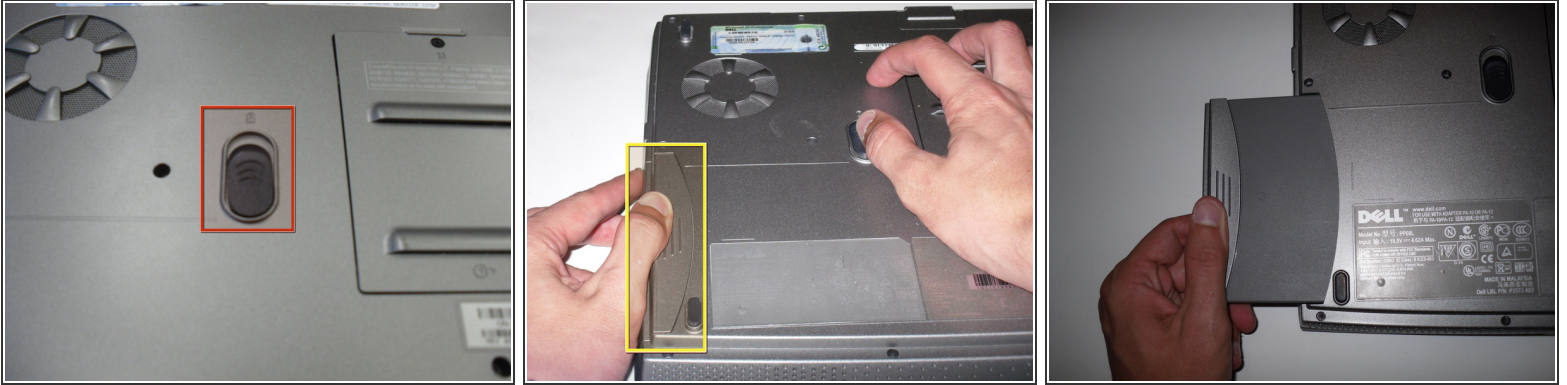

- Place the laptop upside down on a clean flat surface.
- Locate the "Battery Release" button. It has a little "Padlock" symbol next to it.
- Slide the "Battery Release" button towards the padlock symbol and hold it there. Note:- The button is spring loaded and will return if released.
- The battery should now be released from the battery compartment
- Gently extract the battery from the side of the laptop.

## Step 2 — Keyboard



- Use a spudger to lift the notched right edge of the hinge cover, and pry it loose
- ⚠ You need to lay the LCD screen down flat to allow the hinge cover to be lifted off
- Lift the hinge cover off and set aside



## Step 3



- Remove 4ea M2 x 3mm keyboard screws
- Lift up keyboard from the rear to expose the connector below
- Disconnect the keyboard ribbon cable from the mother board

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 04:49:44 PM.